



# Model 3A

## Ratchet Leverage Arbor Press Instruction and Parts list

### MODEL 3A

<u>Item</u>	<u>Part Name</u>	<u>Part No.</u>
1	Frame	245
2	Ram Cap	296
3	Table Plate Assembly	701226
4	Leverweight	258
5	Pawl	297
6	Ram (2" x 2" x 23")	253
7	Retaining Ring	67955
8	Pawl Pin	255
9	Spindle	256
10	Handbrake (2 required)	214
11	Handbrake Clamp	215
12	Handbrake Stud	223
13	Rest Pin	280
14	Handle	283
15	Handwheel	257

***Please contact factory for current prices.***



**Ordering information:** Please order all repair parts by part number and name, also mention model number of press. All parts are shipped F.O.B. Factory in Grand Haven, MI.

**Lubrication:** Keep all working parts of the press well oiled for easier operation. Also keep a light film of oil over the entire surface of the ram to prevent rust.

### **DAKE**

Division of JSJ Corp.  
724 Robbins Road  
Grand Haven, MI 49417

Phone: 616-842-7110 800-937-3253  
Fax: 616-842-0859 800-846-3253  
E-Mail: customerservice@dakecorp.com  
technicalservice@dakecorp.com  
Website: www.dakecorp.com

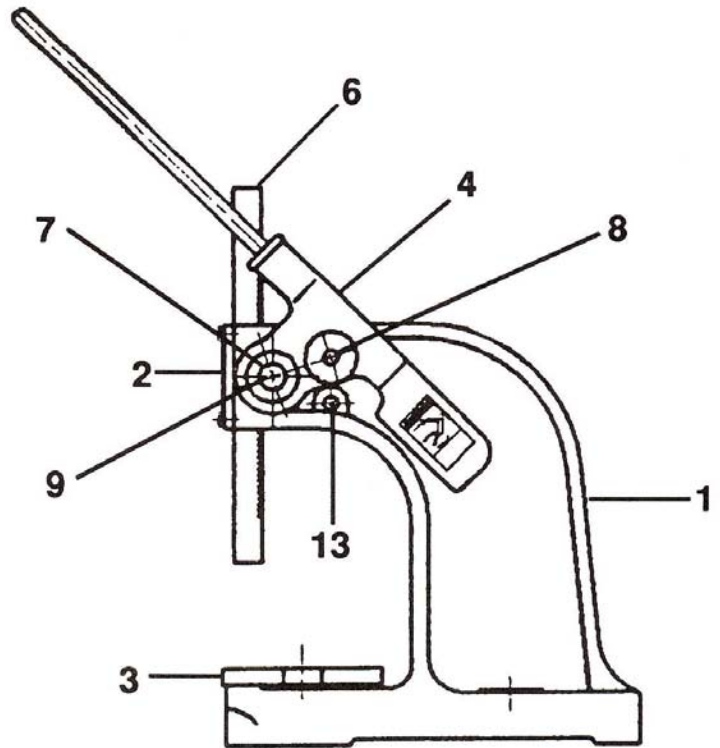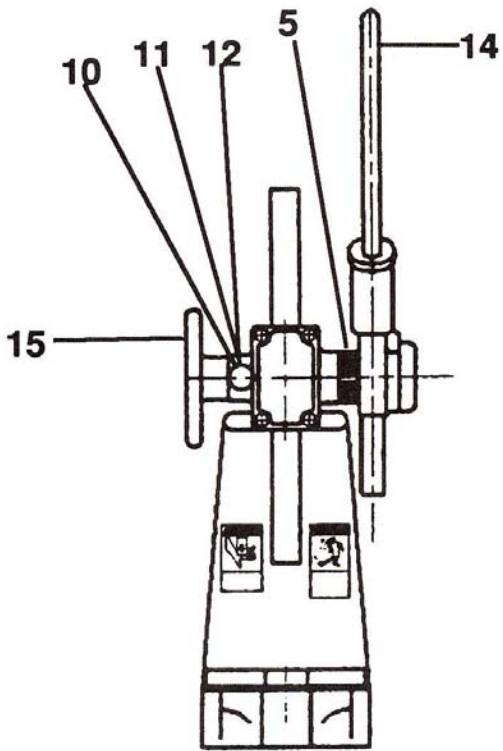

Warning Label:  
300168

⚠ WARNING		
Establish solid footing to prevent falls.	Keep hand away from point of operation. Read instructions.	Guard workpiece to prevent projectiles from reaching operator. Wear eye protection.

⚠ WARNING
Equipment must be securely anchored to prevent tipping.

Warning Label:  
79979



## SAFETY

**This is the safety alert symbol.** When you see this symbol on your press, be alert to the potential for personal injury.

### Follow recommended precautions and safe operating practices.

<p><b>Carefully read all safety messages in these instructions and on your press safety signs.</b> Keep safety labels in good condition. Replace missing or damaged safety labels.</p>	<p><b>This machine is intended to be operated by one person.</b> This person should be conscious of the press ram movement not only for themselves but also for persons in the immediate area of the machine.</p>	<p><b>Under no circumstances increase the leverage ratio of the press by using a longer handle or by placing a pipe over the handle.</b> Never hammer on top of the ram.</p>
--	---	--