



Model 5

Compound Leverage Arbor Press

Instruction and Parts list

MODEL 5

<u>Item</u>	<u>Part Name</u>	<u>Part No.</u>
1	Main frame	301
2	Ram cap	261
3	Top table	302
4	Lower table	303
5	Table plate assembly	701227
6	Compound	304
7	Pawl	274
8	Hand brake	277
9	Hand brake clamp	278
10	Handwheel	294
11	Mandrel catcher	306
12	Table bracket	307
13	Compound rest pin	280
14	Ram (2" x 2" x 24")	275
15	Pinion shaft (Spindle)	290
16	Handle	283
17	Pin (1" x 10 1/2")	286
18	Pin (1" x 6 1/4")	288
19	Pawl pin	284
20	Lever weight pin	308

<u>Item</u>	<u>Part Name</u>	<u>Part No.</u>
21	Table shaft	309
22	Hand brake stud	289
23	Leverweight	305

Please contact factory for current prices.


Ordering information: Please order all repair parts by part number and name, also mention model number of press. All parts are shipped F.O.B. Factory in Grand Haven, MI.

Lubrication: Keep all working parts of the press well oiled for easier operation. Also keep a light film of oil over the entire surface of the ram to prevent rust.

DAKE

Division of JSJ Corp.
724 Robbins Road
Grand Haven, MI 49417

Phone: 616-842-7110 800-937-3253
Fax: 616-842-0859 800-846-3253
E-Mail: customerservice@dakecorp.com
technicalservice@dakecorp.com
Website: www.dakecorp.com

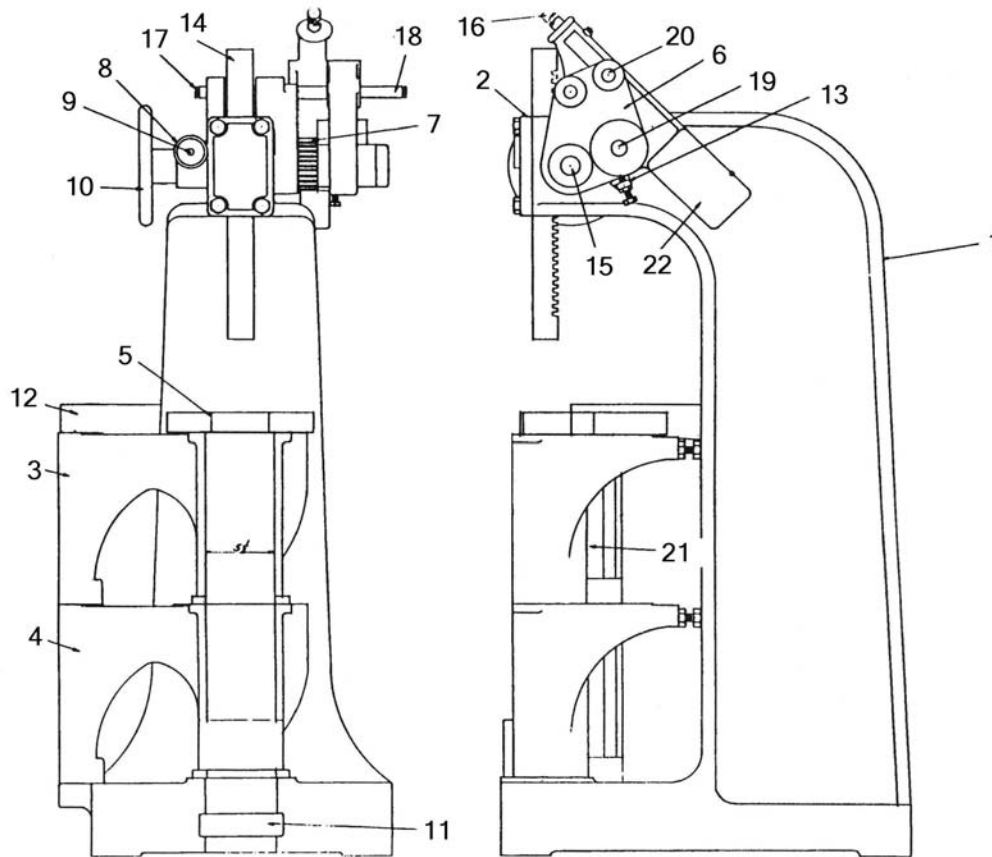

SAFETY

This is the safety alert symbol. When you see this symbol on your press, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

Carefully read all safety messages in these instructions and on your press safety signs. Keep safety labels in good condition. Replace missing or damaged safety labels.

This machine is intended to be operated by one person. This person should be conscious of the press ram movement not only for themselves but also for persons in the immediate area of the machine.

Under no circumstances increase the leverage ratio of the press by using a longer handle or by placing a pipe over the handle. Never hammer on top of the ram.